


ASSEMBLY INSTRUCTIONS FOR YOUR

Jonathan Adler SPUTNIK CHANDELIER

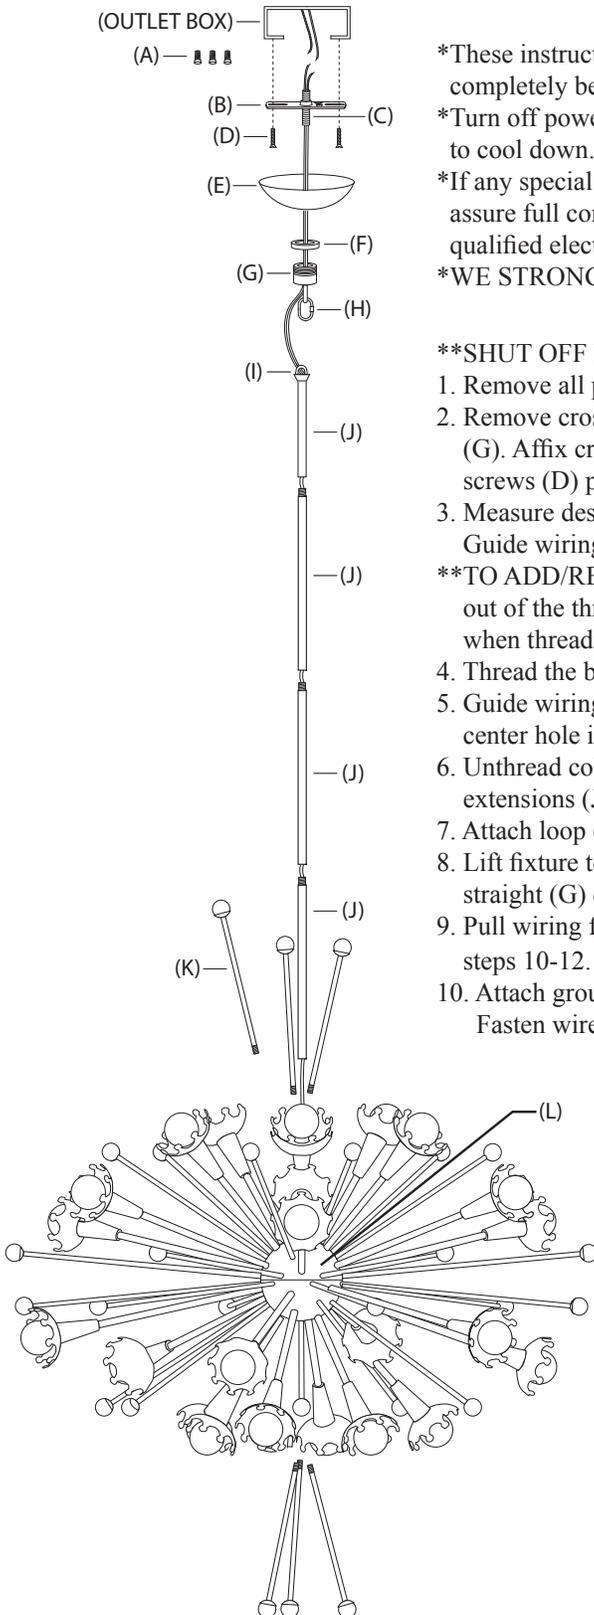

IMPORTANT SAFETY INSTRUCTIONS:

- *These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- *Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- *If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.
- *WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**

ASSEMBLY INSTRUCTIONS

****SHUT OFF ELECTRICAL SUPPLY AT CIRCUIT BREAKER****

1. Remove all parts carefully from the carton. Do not throw away any parts.
2. Remove cross bar (B) from hang straight (G) by unthreading tube (C) from hang straight (G). Affix cross bar (B), including threaded tube (C), to ceiling outlet box using cross bar screws (D) provided.
3. Measure desired drop for fixture to hang and add/remove extension tubes (J) as needed. Guide wiring through extension tubes before threading tubes together.
- **TO ADD/REMOVE EXTENSIONS: (Un)Thread the threaded nipple of one extension into/out of the threaded opening of the next extension. Make sure electrical cord is pulled tight when threading extensions together to prevent damage to the wiring.****
4. Thread the bottom extension (J) onto the threaded tube located at the top of housing (L).
5. Guide wiring from top extension (J) through center hole in hang straight (G) and through center hole in canopy (E).
6. Unthread collar (F) from hang straight (G). Slide collar (F) and canopy (E) down extensions (J) until they rest on housing (L).
7. Attach loop (I) and hang straight (G) using quick link (H).
8. Lift fixture to ceiling outlet box. Guide wiring through threaded tube (C). Thread hang straight (G) onto threaded tube (C).
9. Pull wiring from ceiling outlet box and make proper electrical connections described in steps 10-12. **A LICENSED ELECTRICIAN IS RECOMMENDED.**
10. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire to hot wire from outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
13. Carefully push wire connections back into ceiling outlet box.
14. Slide canopy (E) up extensions (J) and hold firmly against ceiling. Slide collar (F) up extensions (J) and thread onto hang straight (G) to secure canopy (E) against the ceiling.
15. Install twenty four 40W MAX. G16, Candelabra base bulbs into sockets.
16. Thread three crystal rods (K) into the small holes in the top of housing (L). Thread three crystal rods (K) into the small holes in the bottom of housing (L).
17. Reconnect main electrical supply from the fuse box/circuit breaker and test the fixture.